

**HAND DRYER**  
**USER'S MANUAL**

## PRODUCTS FEATURES

The Automatic Hand Dryer adopts metal shell structure. There's double temperature protection device in the machine. The dryer features in high power, easy installation, user-friendly, safe and reliable.

Without touching anywhere when you use, just put your hands below the air outlet, you can get comfortable warm wind drying your wet hand. And as your hands leave the air outlet, this hand dryer can be closed automatically, in order to avoid cross infection of germs.

## TECHNICAL DATA:

Rated power: 2300W  
Wind speed: >17m/s

Rated voltage: 230V~50Hz  
Action distance: 50~200mm

## INSTALLATION:

### 1. Position

This machine can be installed and used in bathroom, washroom, kitchen, etc.. The distance shall be around 110cm from the ground. Keep certain distance between the dryer and the door to avoid hit when opening and closing the door.

### 2. METHOD

- Drill four holes in the wall according to picture and bury the expansion tube into the hole.
- Screw out the two hexagon socket head cap screws of the shell with the hexagon wrench enclosed with the machine; discharge the shell.
- Fix the holder to the wall with the fixing screw enclosed with the machine. Then after hanging the shell above the holder, press tightly the bottom of the holder.

## HOW TO USE:

- Connect with the power supply after installation.
- When putting hands under the induction region (within 11cm under the sensor), the machine automatically starts to work; and it will automatically stop when leaving for 1 second. The dryer stops when working continuously for an amount of time and exceeds the programmed time. Re-induction makes it start to work again.


## CAUTION

- The device should be installed on a fixed, stockless wall.
- Bumping to the device is forbidden.
- Keep away from water like electric liquid.

4. Do not install in room with rusty air or electric dust.

5. Do not fix it by a man who has no experience to avoid accidents.

6. Cut off the power when it is not used for long time.


7.  Meaning of crossed-out wheelie bin: Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities.

Contact your local government for information regarding the collection system available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at least free of charge.

8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

9.  This hand dryer must be fixed out of reach of a person taking a bath or shower.

10. This appliance is not intended for use by a person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety; children should be supervised to ensure that they do not play with the appliance.

